


Measuring For Roman Blinds

Measuring for Roman Blinds

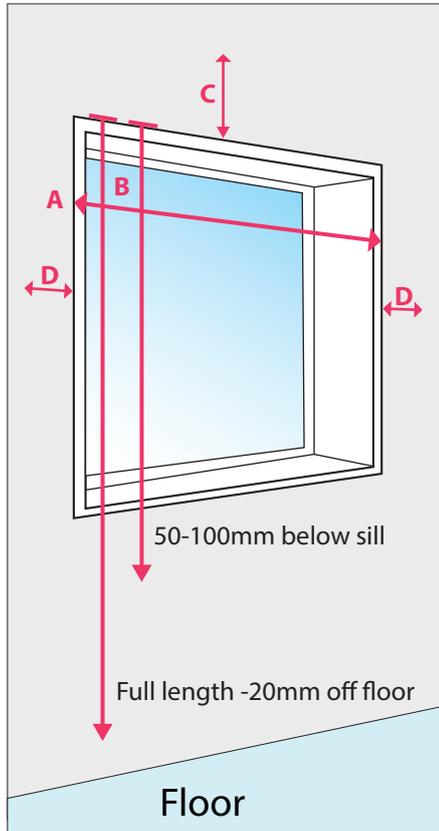

A Measure the EXACT outside width of your window frame.

B Measure the height of your window frame from the top to where you'd like your blind to finish.

For windows off the ground it's a good idea to finish 50-100mm below the bottom of the frame to allow for total clearance.

For full length windows it's a good idea to measure to 20mm off the floor to allow for the blind to stretch slightly once installed. For this reason, if your blind is over 2400mm it's best to leave a 30mm clearance from the floor.

C Because roman blinds bunch when they are open, it's also a good idea to mount them 100-150mm above the top of the window to maximise the flow of light when they're open.

D Depending on your preference, you may also want to add 30-100mm each side of the blind. This will prevent light potentially entering from the sides.

Essential Measuring Tips

1. Using a metal measuring tape is easier and more accurate.
2. Use our easy measurement sheet to record you measurements and be extra care to ensure you don't reverse the width and drop measurements.
3. Double check all your measurements. We don't refund or replace items due to inaccurate measurements.
4. We need your exact measurements. There is no need to shorten them to allow for clearance. We'll take care of that for you.
5. Remember that all measurements need to be in millimeters.
6. Windows in your home may look the same size, but they may in fact be slightly different. It's always safe to measure every window.
7. If you have any questions don't hesitate calling us on **1300 918 390** between **9am and 9pm Mon to Fri** or **10am to 5pm Sat & Sun**. Our customer service team is more than happy to help.

5 Year
Warranty
www.diyonlineblinds.com.au

Best Price Guarantee **10%**
Or we'll beat it by
www.diyonlineblinds.com.au

**Australian
Made &
Owned**

www.diyonlineblinds.com.au

